

**ROUTINE MAINTENANCE**

Cleaning your Elleci Product is quick and simple. Even though the non-porous surface prevents liquids penetrating into the material, it is preferable to remove them immediately using a soft, non-abrasive sponge and standard dish detergent. You should then rinse the surface and dry it carefully using a microfibre cloth.

**NON-ROUTINE MAINTENANCE**

Cleaning stubborn stains is not difficult: all you need to do is choose the right product and use it correctly.



For stubborn stains on **light-coloured** Products, you can use a solution of bleach and warm water ( $\frac{3}{4}$  to  $\frac{1}{4}$ ), leaving it to act for eight hours (we recommend that this cleaning be performed during the night). Afterwards, rinse thoroughly and dry the entire surface carefully using a microfibre cloth. If the stains remain, the operation can be repeated one or two more times.



For stubborn stains on **dark-coloured** Products, you can remove them directly with a soft, non-abrasive sponge and standard dish detergent, using small circular movements. When finished, rinse using warm water and carefully dry the entire surface using a microfibre cloth. If the stains remain, the operation can be repeated one or two more times.



To remove limescale stains, we recommend the use of a descaling product diluted with warm water. Distribute the solution uniformly over the entire surface of the Product. Clean with a soft, non-abrasive sponge using small circular movements and leave the product to act for several minutes (follow the instructions and conditions for use on the product label). When finished, rinse using warm water and dry carefully using a microfibre cloth.

Failure to follow the cleaning and maintenance instructions stated in this manual may invalidate the standard warranty provided by the manufacturer.

For more information, please consult our website [www.elleci.com](http://www.elleci.com).