





## THE ASSEMBLING INSTRUCTIONS OF KARIZMA BACK TO WALL WC

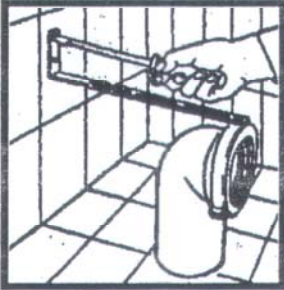

1. If the drainage is from floor "L" PVC pipe should be used together with "L" fixing element and the metal ring.

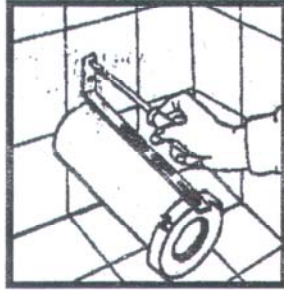

2. If the drainage is from wall, straight PVC Pipe should be used together with "L" fixing element and the metal ring.




3. In case of the usage at eccentric pipe, soap should be applied to the joint parts of the pipe.




4. Also, "L" Pipe can be made slippery by applying soap.



5. The WC Pan should be temporarily on is put on its place.

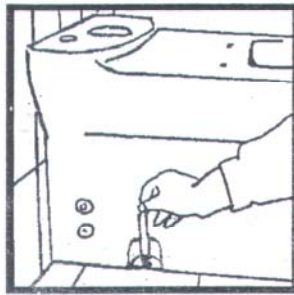


6. The fixing places should be marked by pencil.

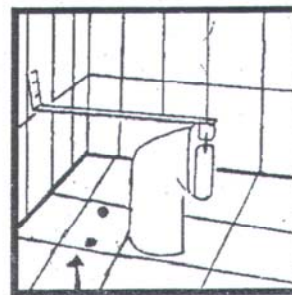


7. Plastic fixing elements should be fixed to its place after pulling back the WC pan.




8. The clean water pipes should be assembled and be checked carefully in case of leakage.

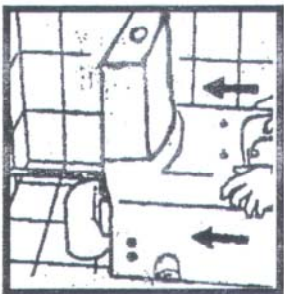

9. The WC Pan should be placed by pushing towards to wall.

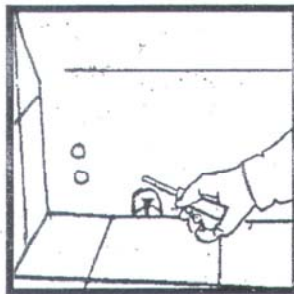


10. The WC pan should be fixed to floor by screwing it.

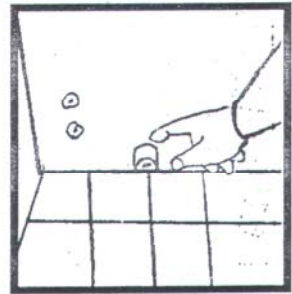

11. The plastic screw covers should be put to screw tops.



12. Clean water installation should be done.

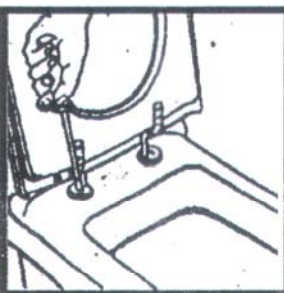

13. The seat cover should be assembled to WC pan.



14. Do not try to fix the WC as shown above

- Toilets must be fitted by a licensed plumber
- Pan must not be cemented to the floor
- For service backup call Arcorp Enterprises 03 9763 3388
- 12 months manufacturer's warranty from date of purchase
- Please retain your receipt as proof of purchase