

Installation Guide

Care Robust Anti Ligature Shower Outlet

PJ-RBSH


paco jaanson

IMPORTANT INFORMATION

- Operating static pressure is 150-500kpa. If pressure exceeds this, then an approved pressure limiting valve must be fitted.
New Regulation : -500kpa maximum static pressure at any outlet within a building. (Ref. AS/NZS 3500.1)
- Shower is fitted with flow regulator. This lower flow rate may not be suitable for connection to some gravity fed Water Heaters, low pressure supply networks, Instantaneous Water Heaters, Tempering Valves, Solar Water Heaters & Thermostatic Mixing Valves. Check with the manufacturers of these products.
NOTE : Warranty is void if flow regulator is not installed as shown.
- Not suitable for gravity feed systems.
- All pipework must be thoroughly flushed prior to installation, as foreign materials may block the flow regulating device and reduce the flow of water.
- Where shower incorporate flow regulator, care shall be exercised during installation to ensure that the male connecting thread do not damage the flow regulator.
- To be installed in accordance with AS/NZS 3500.
- Maximum hot water temperature : 70 °C

Maintenance and Care

- Using a soft cloth with a mild detergent or soap is all that is required to clean surfaces.
- Do not use abrasive cream cleaners or citrus based cleaning products. These will damage the surface.

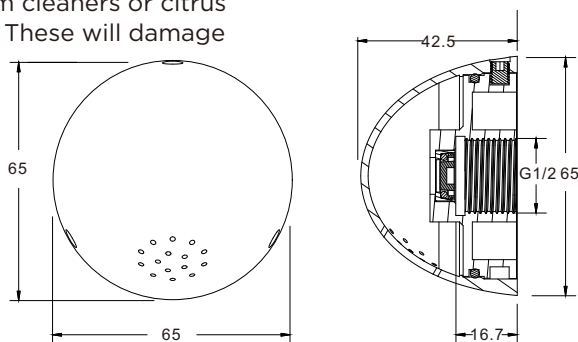

PACO JAANSON BATHROOM INNOVATIONS

www.pacojaanson.com.au | T: 1800 006 260

Dimensions are in millimeters and are subject to manufacturing variations. Information provided within this installation sheet is correct at the date of printing. Please confirm all particulars against your product prior to installation.



Installation

- 1 - Using 2.5mm Allen key loosen 3x grub screws, and remove the mounting bush assembly.
- 2 - Apply thread tape to the outlet nipple, screw the mounting bush assembly onto nipple.
- 3 - Check the O ring is fixed to the mounting bush.
- 4 - Fit the body assembly to the mounting bush and secure with 3x grub screws.
- 5 - Turn water on and test for leaks.

